

# PACKING LIST FOR 18' x 30' CANOPY

\*NOTE: Canopy Dimensions Not Exact\*

QTY.	PART No.	DESCRIPTION
1	T2030	TARP FOR 18 X 30
6	E3	3 WAY END PIECE
6	C4	4 WAY CENTER PIECE
72	BB	BALL BUNGIES
8	P58HD	5' 8" GALVANIZED POLES
17	P50SHD	5' GALVANIZED POLES – SWAGED
17	P50HD	5' GALVANIZED POLES

} When these two poles are put together they make a P99HD - 9' 9" pole.

\*Poles are 1.315" O. D.

## \*\*\*\* NOTES \*\*\*\*

1. READ ALL INSTRUCTIONS BEFORE STARTING ASSEMBLY.
2. CANOPIES MUST BE SECURED DOWN (SEE OPTIONAL DETAILS ON PAGE 4)
3. NOT INTENDED FOR PERMANENT USE
4. TAKE TARP OFF BEFORE HEAVY SNOW
5. TAKE TARP OFF BEFORE HIGH WIND




# ASSEMBLY OF 18' X 30' CANOPY

Assembly of the canopy should be on a level sight and assembled in the following order.

**WARNING: DO NOT USE FOR SNOW COVER.**

**STEP 1:** a) Lay out the top section of the canopy on the ground as follows.  
b) Insert Part Number P99HD into Part Number E3 and C4.

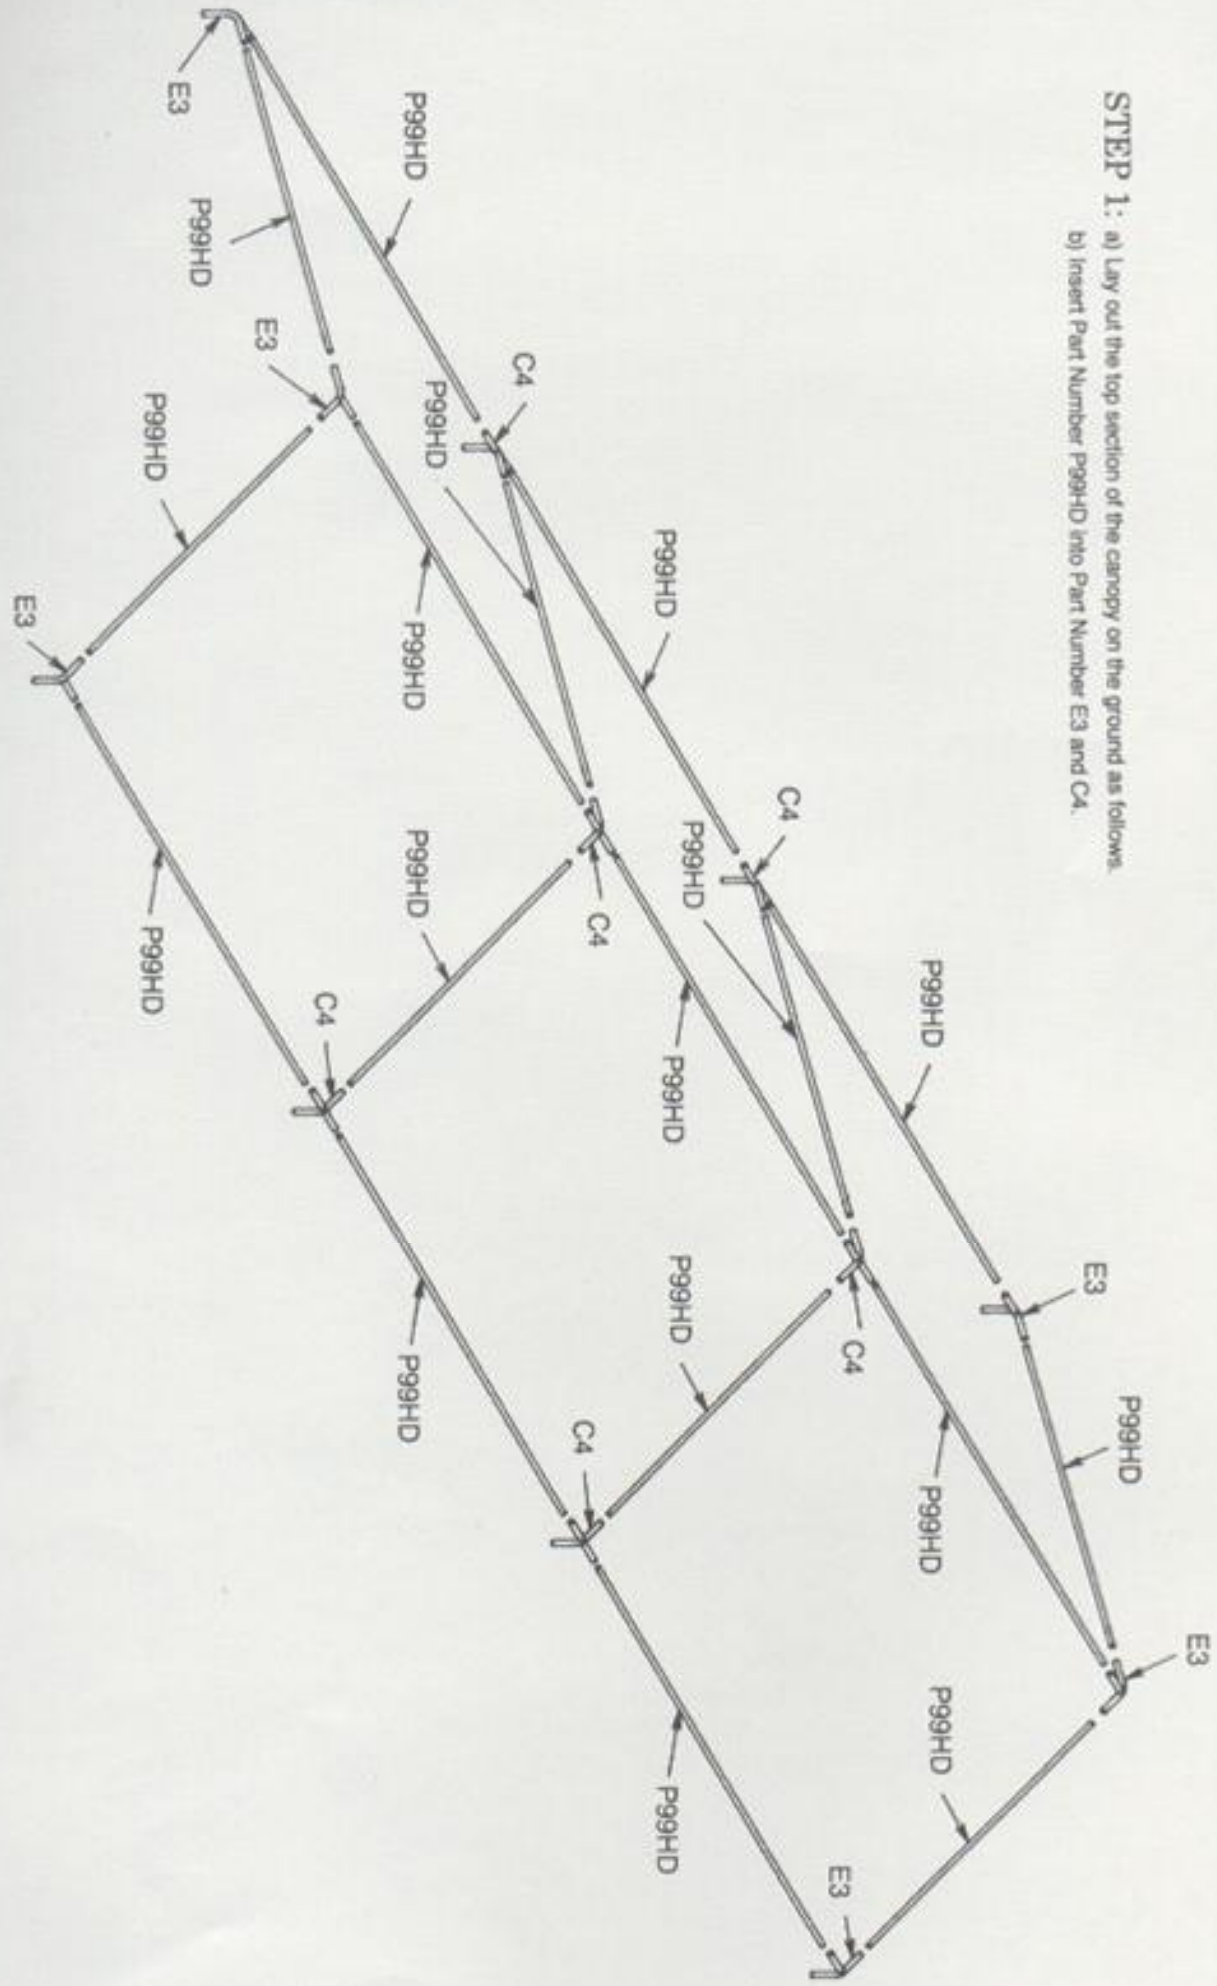


# ASSEMBLY OF 18' x 30' CANOPY


Assembly of the canopy should be on a level sight and assembled in the following order.

**STEP 2:** a) Extend tarp over assembly and attach Part Number BB.  
"Tarp will only fit one way"

Note: Do opposite corners, then sides and top with Part Number BB.  
"Only corners on ends get double bungee"

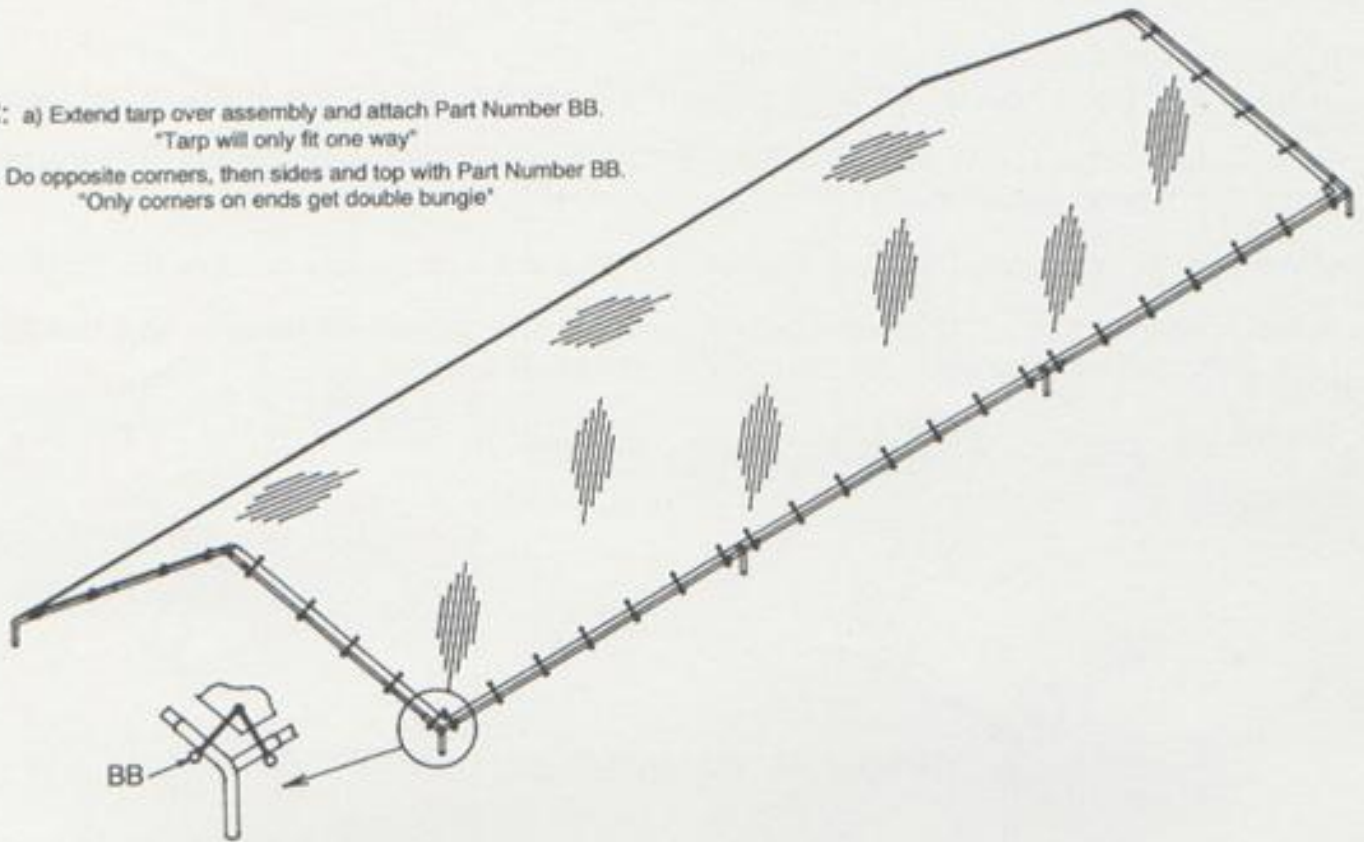


**STEP 3:** a) Insert Part Number P58HD into Part Number E3 and C4.  
Start with one side and completing that side, then do the opposite side  
b) Do not forget to secure canopy to ground.

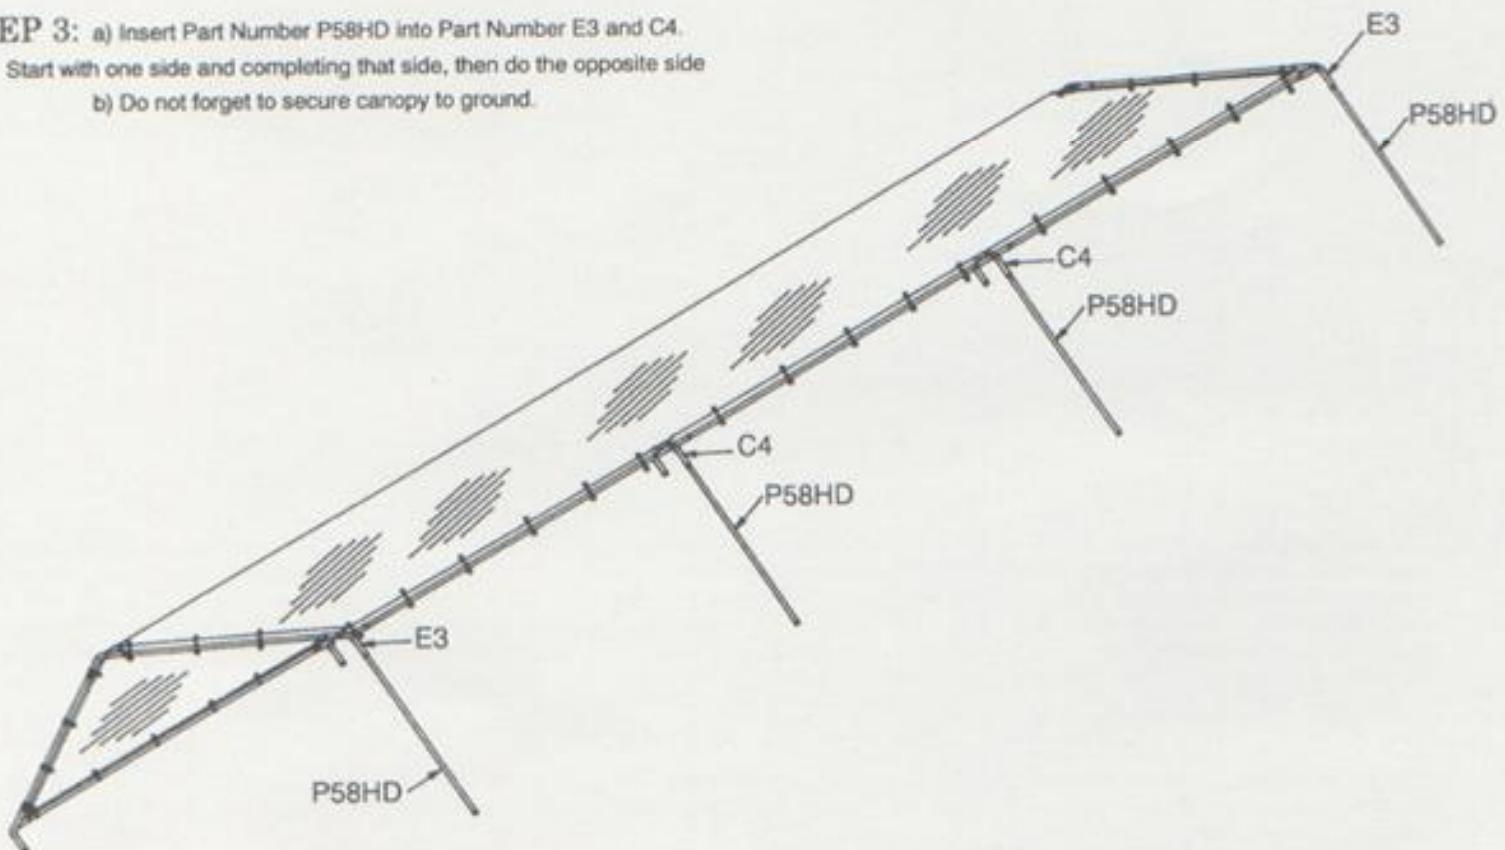

# HELPFUL HINTS ON ASSEMBLY OF THE 18' x 30' CANOPY

1. Pick a good level spot to setup the All-Purpose Canopy.
2. If the tarp does not fit check the following:
  - a) Make sure poles are pushed firmly into all the 3-way end pieces and 4-way center pieces.
3. Remove tarp or take down canopy before (SNOW & WIND STORMS) this will keep the tarp and poles in good condition.
4. Make sure canopy is secured from the 3-way ends and 4-way centers down to the ground.
5. When putting legs on, start with the two center legs. The canopy will balance on those two legs, and complete that side. Do the same for the other side.
6. Enjoy!!

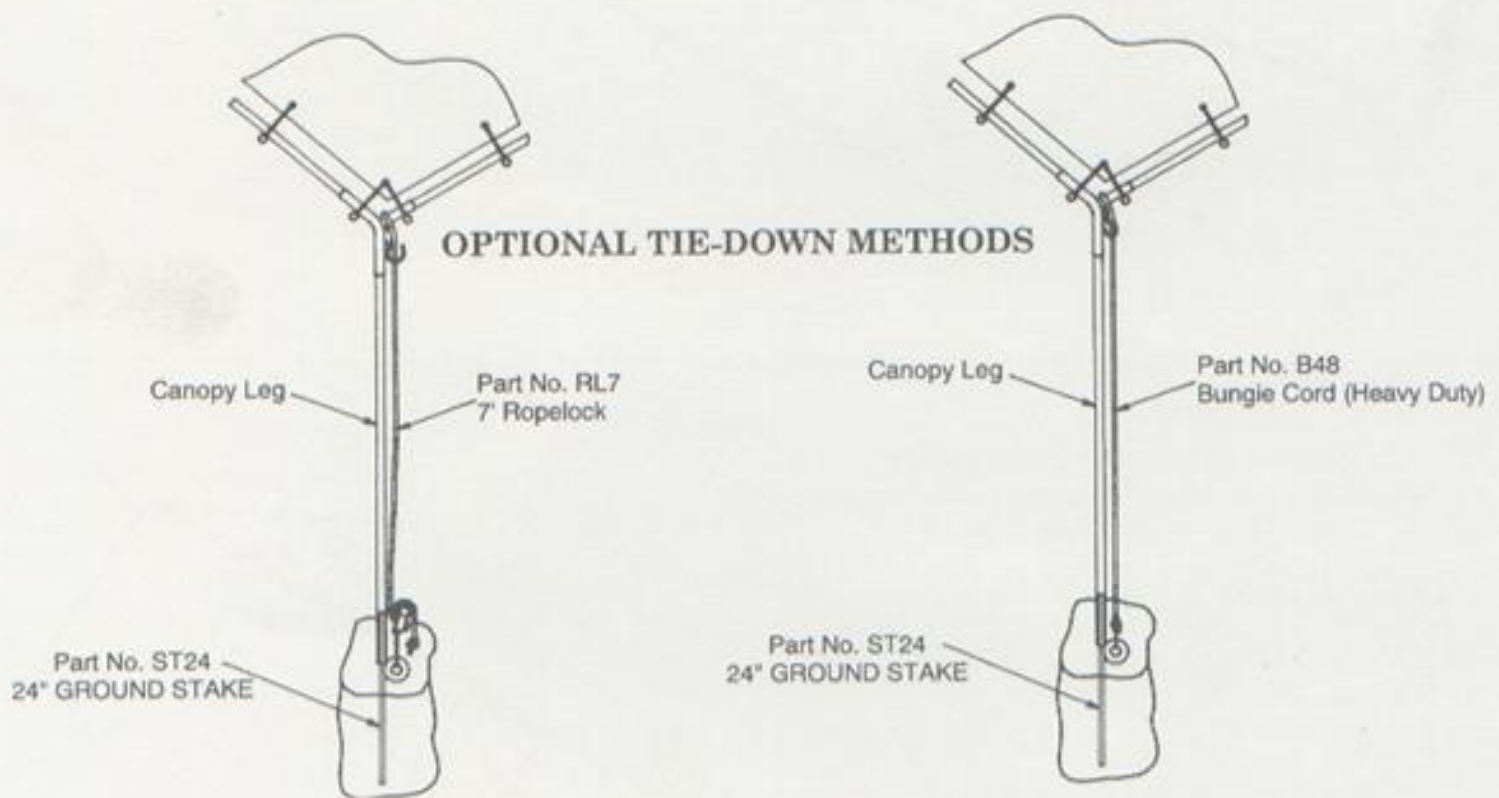

## ALL PURPOSE CANOPY THIRTY DAY LIMITED WARRANTY

Harpster of Philipsburg promises to repair or replace the All Purpose Canopy or any part of it within thirty (30) days of purchase if defective in materials or workmanship. This limited warranty does not cover damage due to neglect, wind, snow, fire, misuse or any act of God, nor does this limited warranty cover damage resulting from the canopy not having been securely fastened down nor from improper installation. Harpster of Philipsburg makes no other warranty and the remedy of repair or replacement is the exclusive remedy. Harpster of Philipsburg, is not liable for indirect, incidental or consequential damages in connection with the use of the All Purpose Canopy, including any cost or expense of providing substitute equipment or service during periods of non-use. Any defective canopy or part must be sent, shipping pre-paid, to Harpster of Philipsburg, attention Warranty Department, 408 Airport Road, Philipsburg, Pennsylvania 16866.

## EXCLUSION OF WARRANTIES

Harpster of Philipsburg makes no warranties which extend beyond the description on the face hereof. Specifically, the Warranty of Merchantability and the Warranty of Fitness for a Particular Purpose are Excluded. The only WARRANTY which is made by Harpster of Philipsburg is the "THIRTY DAY LIMITED WARRANTY" described above.

[www.harpster-canopies.com](http://www.harpster-canopies.com)

Harpster of Philipsburg, Inc. • P.O. Box 429 • 408 Airport Road • Philipsburg, PA 16866 Phone: (814) 342-2930 • Fax (814) 342-4193 • Email: [sales@harpster-canopies.com](mailto:sales@harpster-canopies.com)